



## PTS Pallet Truck Scale

Adam Equipment's PTS pallet truck scale allows users to measure the weight of objects as they are moved from one place to another whether it's in a warehouse, on the production floor, or in the shipping department.

The sleek, low profile design coupled along with solid non-marring polyurethane wheels, steel pallet forks, and zero radius pivoting handle make the PTS a must have for commercial and industrial users.

Included with the PTS is the proven AE 402 indicator which uses an LCD display giving bright display in poor visibility areas combined with easy to use keypad and long life battery makes the PTS easy and convenient to use. The AE 402 is IP66 sealed for dust and water environments.



# PTS Pallet Truck Scale


## Features

- Vivid, backlit LCD easily visible in any lighting conditions
- Programmable backlight can be set to "always on", "always off" or "light only when weighing"
- Capacity tracker built into display for easily monitoring possible overloads
- Checkweighing LEDs light to clearly show under, over and acceptable limits
- Colour-coded keys facilitate quick recognition of the most frequently used buttons
- RS-232 interface for connection to computers and printers
- Splash-proof housing, keypad and display mean easy cleaning and peace of mind
- Wheels swivel, allowing easy movement
- Audible overload alarm warns when capacity has been exceeded
- Checkweighing with audible alarm
- External calibration allows for verification and adjustment with weights

- Parts counting with preset sample sizes
- Selectable auto-clear function enables the last item to be reset each time the scale returns to zero
- Selectable digital filtering for animal/dynamic weighing delivers stable results for moving subjects
- Zero-tracking feature ensures display returns to zero reading
- Rechargeable battery included for operation virtually anywhere
- Programmable auto power-off to save energy
- AC adapter included

## Applications

- Weighing
- Parts counting
- Percentage weighing
- Checkweighing
- Dynamic / animal weighing

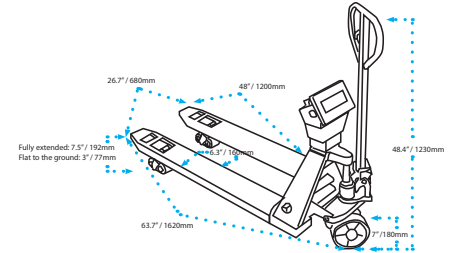

Model	PTS 2000
Capacity	2000kg
Readability	0.5kg
Pan Size	160x1150mm
Weighing Units	kg, lb, lb:oz, oz, N
Stabilisation Time (sec)	2
Interface	RS-232
Calibration	External calibration
Display	Backlit LCD with 40mm-high digits
Power Supply	12VDC 800mA adapter / Internal rechargeable battery
Operating Temperature	-10° to 40°C
Housing	Mild steel base
Overall Dim.	550x1525x1175mm
Net Weight	125.00kg

With more than forty years of experience in the production of balances and scales, professionals worldwide rely on Adam for feature-rich, quality products with best-in-class value - The right balance of speed, performance and value.

Supplied by:

## Item number

- 3126011263
- 3126011281
- 1120011156
- 3074010507
- 600002028
- 1100011297
- 700400103

## Description

- Thermal paper for item no. 1120011156-ATP printer
- Thermal paper for item no. 1120011156-ATP printer (pack of 10)
- ATP Adam thermal printer
- RS-232 to USB Adapter (must order corresponding RS-232 cable)
- Adam DU Software
- AE402 Relay Box
- RS-232 Cable