


PT industrial scales offer durability and quality construction for a variety of different applications. The PT features a large, steel base with a diamond plate surface, adjustable leveling feet and cable. Optional ramps facilitate loading and unloading heavy objects. The platforms are available with or without indicators. Adam offers a range of indicators including the GK-S, GK-Plus, GC, AE 403, AE 503, AE 504 and AE 505.

***Quality construction with diamond-plate surface  
for ultimate durability and performance***

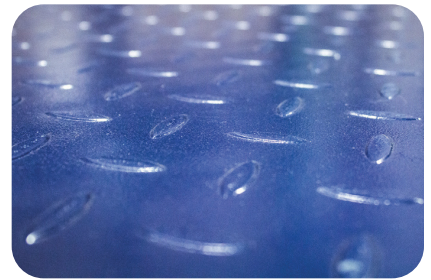

## Features

- Rugged construction stands up to industrial use
- Diamond-plate surface for added grip
- Optional ramps facilitate loading and unloading
- Can be used with any Adam indicators
- Approximately five-meter/15-foot shielded cable
- Adam Connect compatible for wireless data transfer to printers and PCs

## Applications

- Weighing
- Parts counting
- Checkweighing
- Dynamic / animal weighing

### ***About ADAM:***

For over 50 years, professionals worldwide have relied on Adam Equipment for an extensive selection of dependable and affordable weighing equipment. Adam provides the right balance of speed, performance and value.

## Product Details

Model	PT 110	PT 310-5	PT 310-10	PT 112	PT 312-5	PT 312-10	PT 115	PT 315-5	PT 315-10	PT 112M	PT 312-5M	
Capacity	2500lb / 1000kg	5000lb / 3000kg	10000lb / 4500kg	2500lb / 1000kg	5000lb / 3000kg	10000lb / 4500kg	2500lb / 1000kg	5000lb / 3000kg	10000lb / 4500kg	2500lb / 1000kg	5000lb / 3000kg	
Readability	0.5lb / 0.2kg	1lb / 0.5kg	2lb / 1kg	0.5lb / 0.2kg	1lb / 0.5kg	2lb / 1kg	0.5lb / 0.2kg	1lb / 0.5kg	2lb / 1kg	0.5lb / 0.2kg	1lb / 0.5kg	
Excitation Voltage	5 - 10 VAC / DC											
Loadcells	4											
Pan Size	39.4"x39.4" / 1000x1000mm			47.2"x47.2" / 1200x1200mm			59.1"x59.1" / 1500x1500mm			47.2"x47.2" / 1200x1200mm		
Weighing Units	Selective											
Calibration	External											
Display	Selective											
Operating Temp.	-10° to 40°C / 14° to 104°F											
Housing	Mild steel base											
Overall Dimensions (WxDxH)	39.4"x39.4"x4.3" / 1000x1000x110mm			47.2"x47.2"x4.3" / 1200x1200x110mm			59.1"x59.1"x4.3" / 1500x1500x110mm			47.2"x47.2"x4.3" / 1200x1200x110mm		
Net Weight	136.6lb / 62kg			174.1lb / 79kg			244.6lb / 111kg			174.1lb / 79kg		
Approvals	N/A										NTEP / Measurement Canada	

## Compatible Indicators



### AE 403 Indicator

The AE 403 indicator can be combined with weighing platforms to handle demanding industrial tasks. It performs well on the loading dock, at food processing plants, in agricultural settings, or in shipping and receiving areas.



### AE 503 Label-Printing Indicator

Strong ABS construction and an integrated label printer enhance functionality for the AE 503 label printing indicator. Add barcodes, QR codes, pictures and custom logos to the 50mm-wide printed labels.



### AE 504 Advanced Label-Printing Indicator

A sturdy, lightweight design with a sealed keypad, an internal rechargeable battery and a built-in printer make the AE 504 counting indicator a great choice for demanding industrial settings and shipping and receiving areas.



### AE 505 Touchscreen Label-Printing Indicator

Combining the intuitive navigation of an 8" / 200mm touchscreen display with the convenience of a built-in printer, USB, RS-232 and optional ethernet, Wi-Fi and Bluetooth connectivity, AE 505 ushers in the next generation of weighing indicator. In addition to creating fully customized labels of multiple lengths with the included software, AE 505 stores up to 10 label designs in its memory.

## Accessories

### Item Number.....Description

700100199..... Mild Steel Ramp - PT 10R 1000mm wide  
 700100200..... Mild Steel Ramp - PT 12R 1200mm wide  
 700100201..... Mild Steel Ramp - PT 15R 1500mm wide



### GC Counting Indicator

With a wide range of features, the GC counting indicator is ideal for parts counting tasks. Its numeric keypad facilitates unit weight and sample entry, while the display shows unit weight, total weight and number of pieces.



### GKaM Approved Checkweighing Indicator

The trade-approved GKAm indicator provides a simple user interface, as well as a built-in checkweighing function that allows users to easily view if samples are above, below or at set targets.



### GK-S Checkweighing Indicator

The affordable GK-S indicator offers unmistakable results every time from its bright, clear display, while providing a simple user interface for efficient operation and quick results for weighing, checkweighing and check counting.



### GK-Plus Checkweighing Indicator

The GK-Plus indicator is purpose-built for easier checkweighing, with full numeric keypad, color-changing checkweighing backlight and huge, 40mm-high weight digits.

Adam Equipment follows a policy of continuous improvement and reserves the right to change specification and pricing without notice. Adam Equipment's standard terms and conditions of sale apply. Errors and omissions excepted.